


LiteFlux LF2XT

CUI Flowchart

CUI -- Compact User Interface

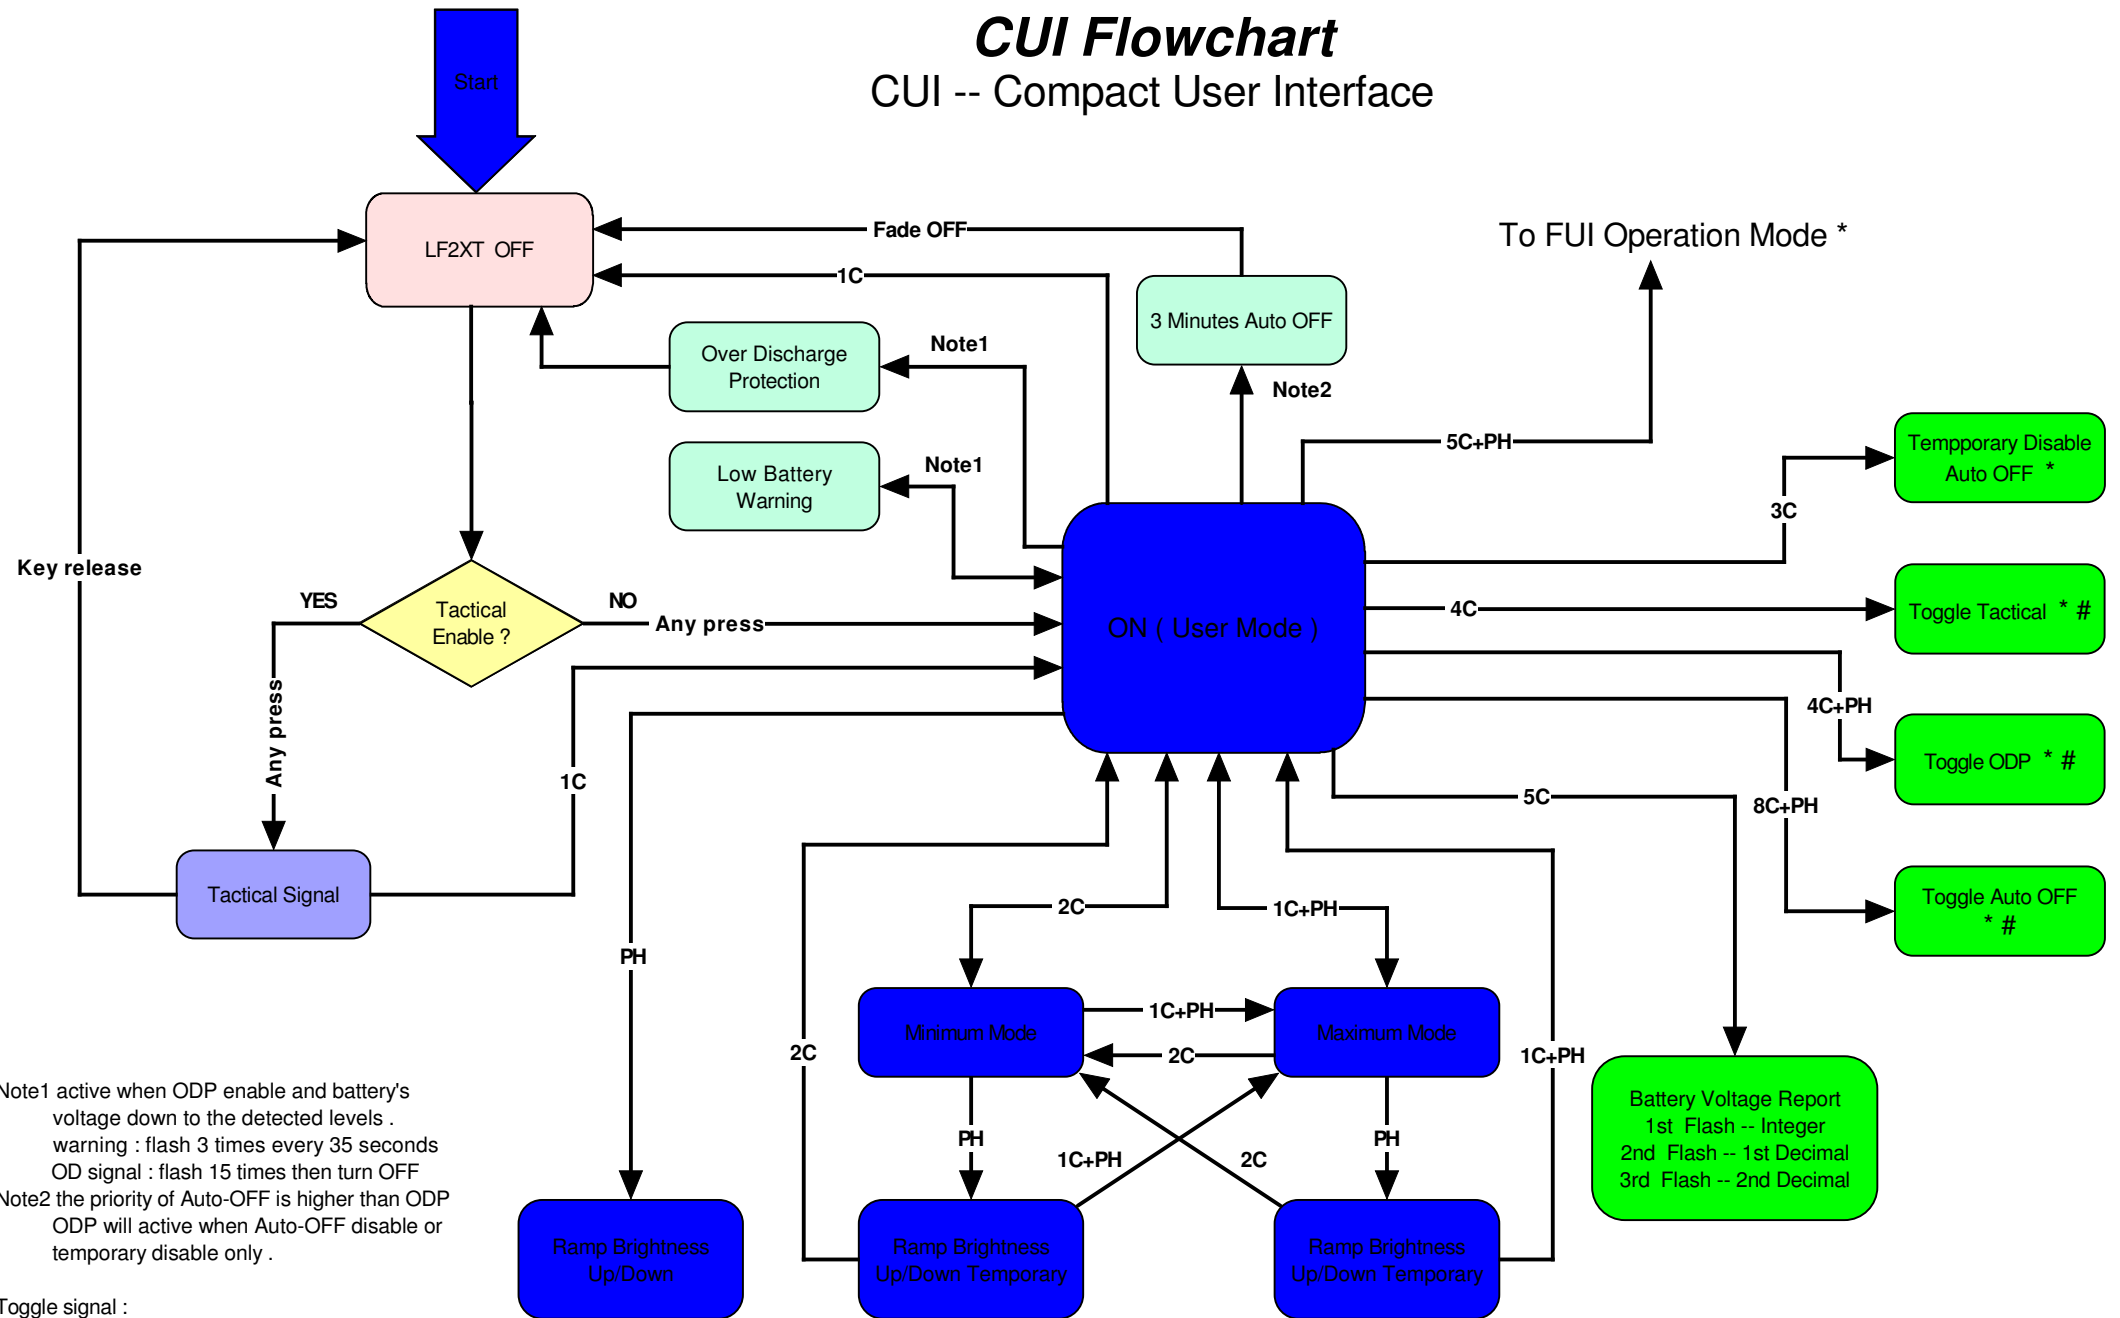


Toggle signal :


- * double flash represent chosen function Enable
- # single flash represent chosen function Disable

LiteFlux LF2XT FUI Flowchart

FUI -- Full function User Interface

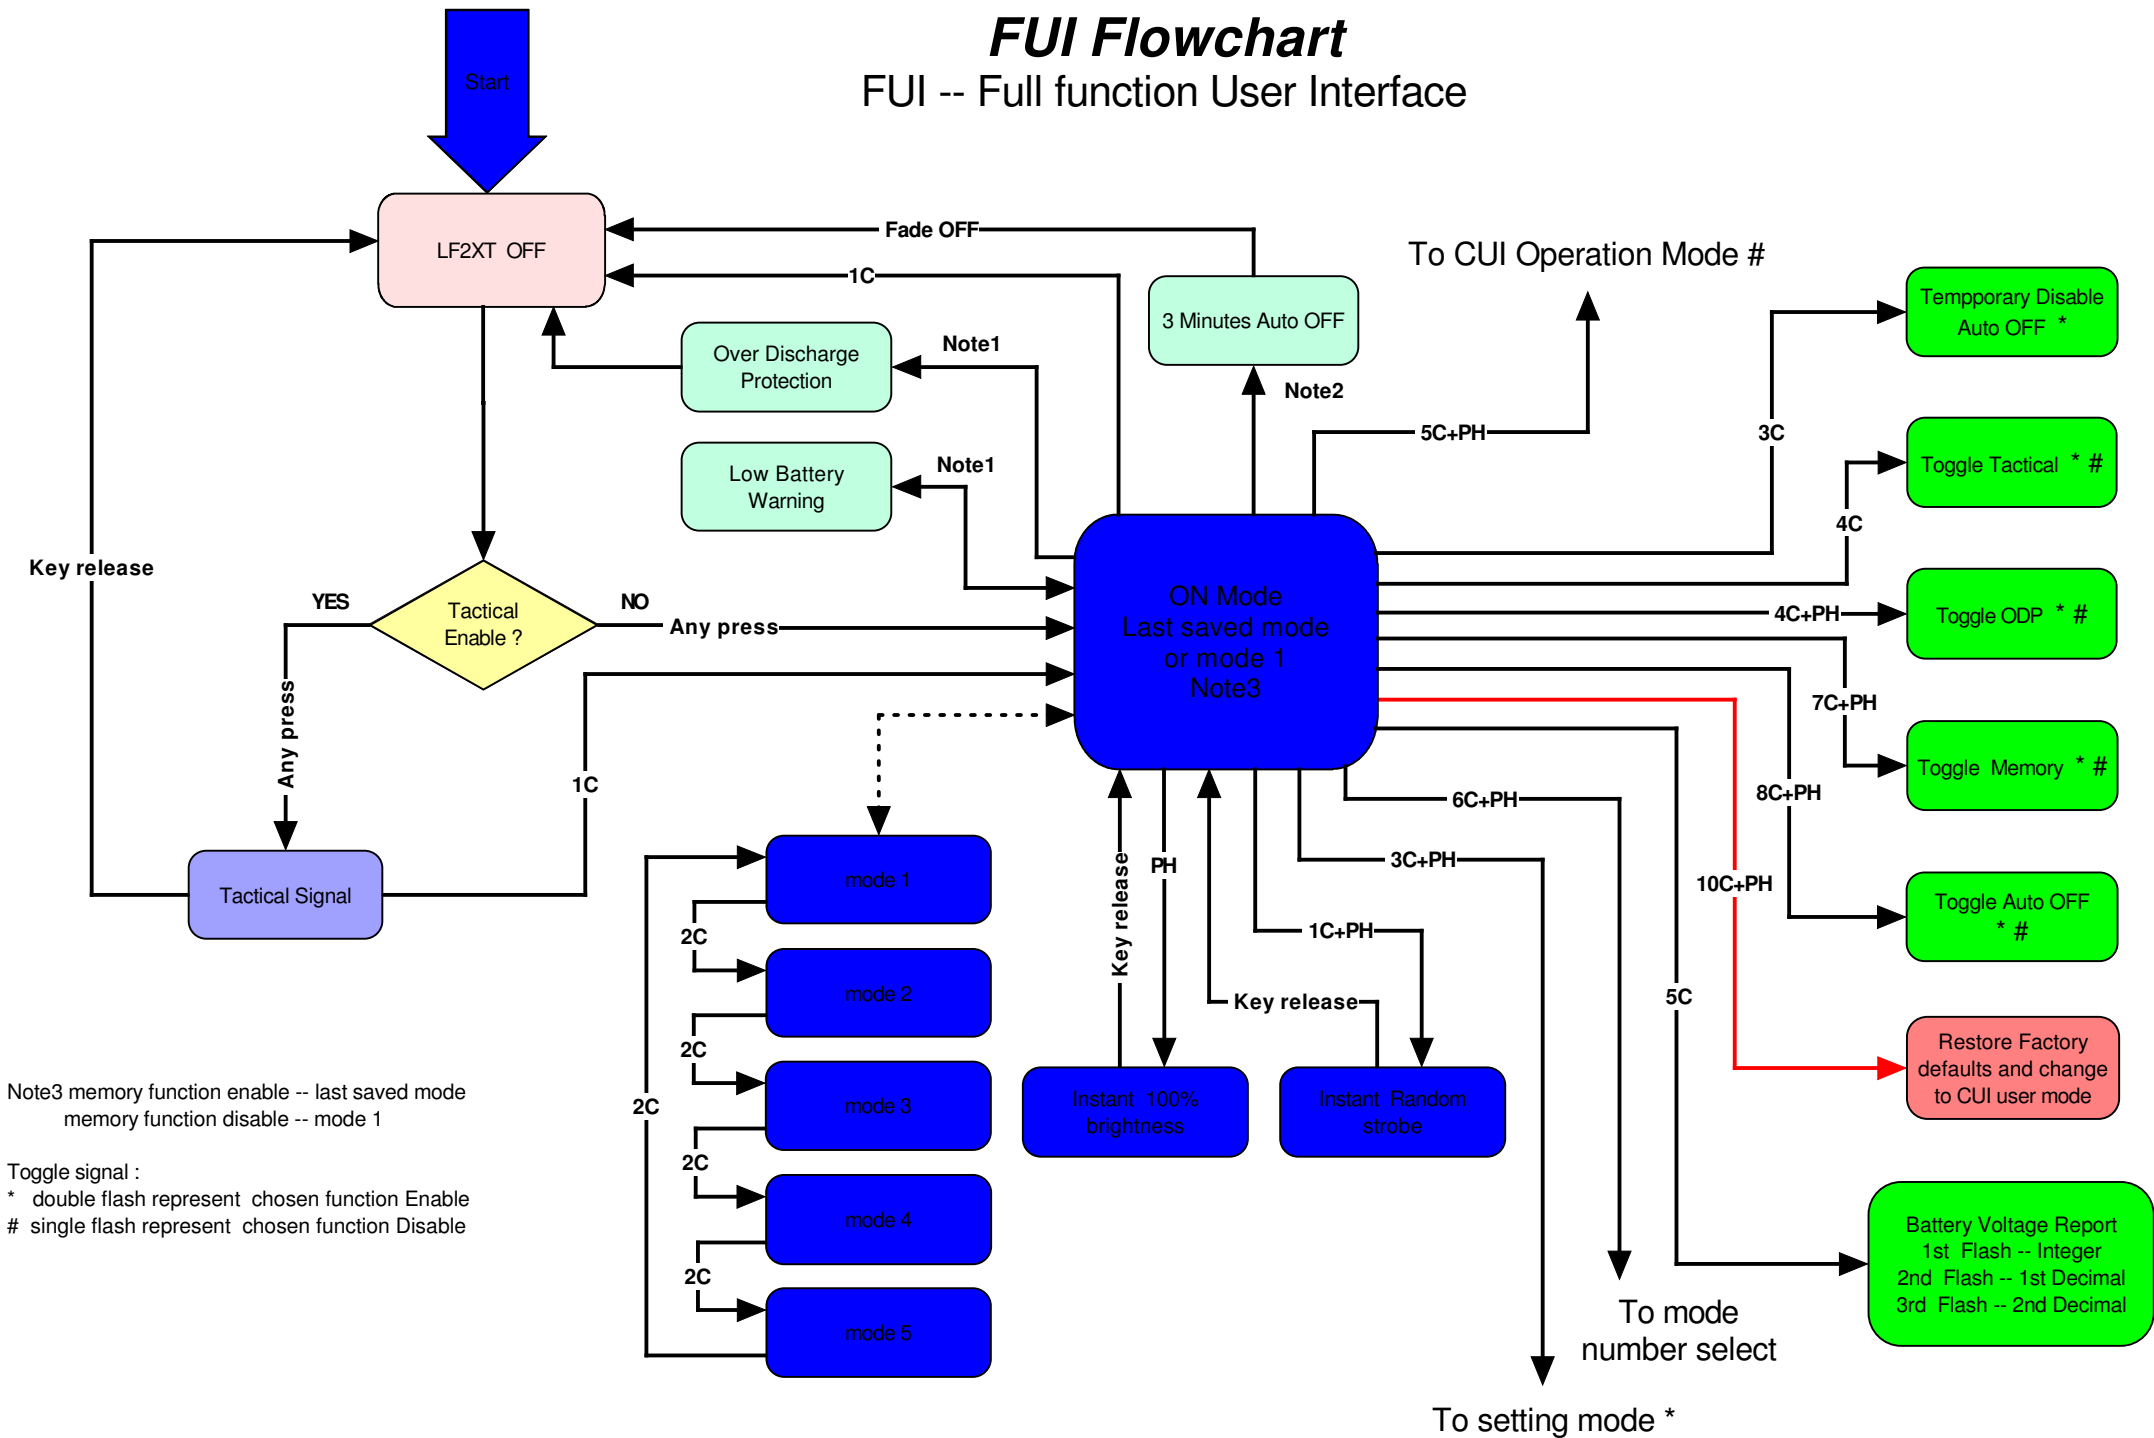

LiteFlux LF2XT FUI Flowchart Continued

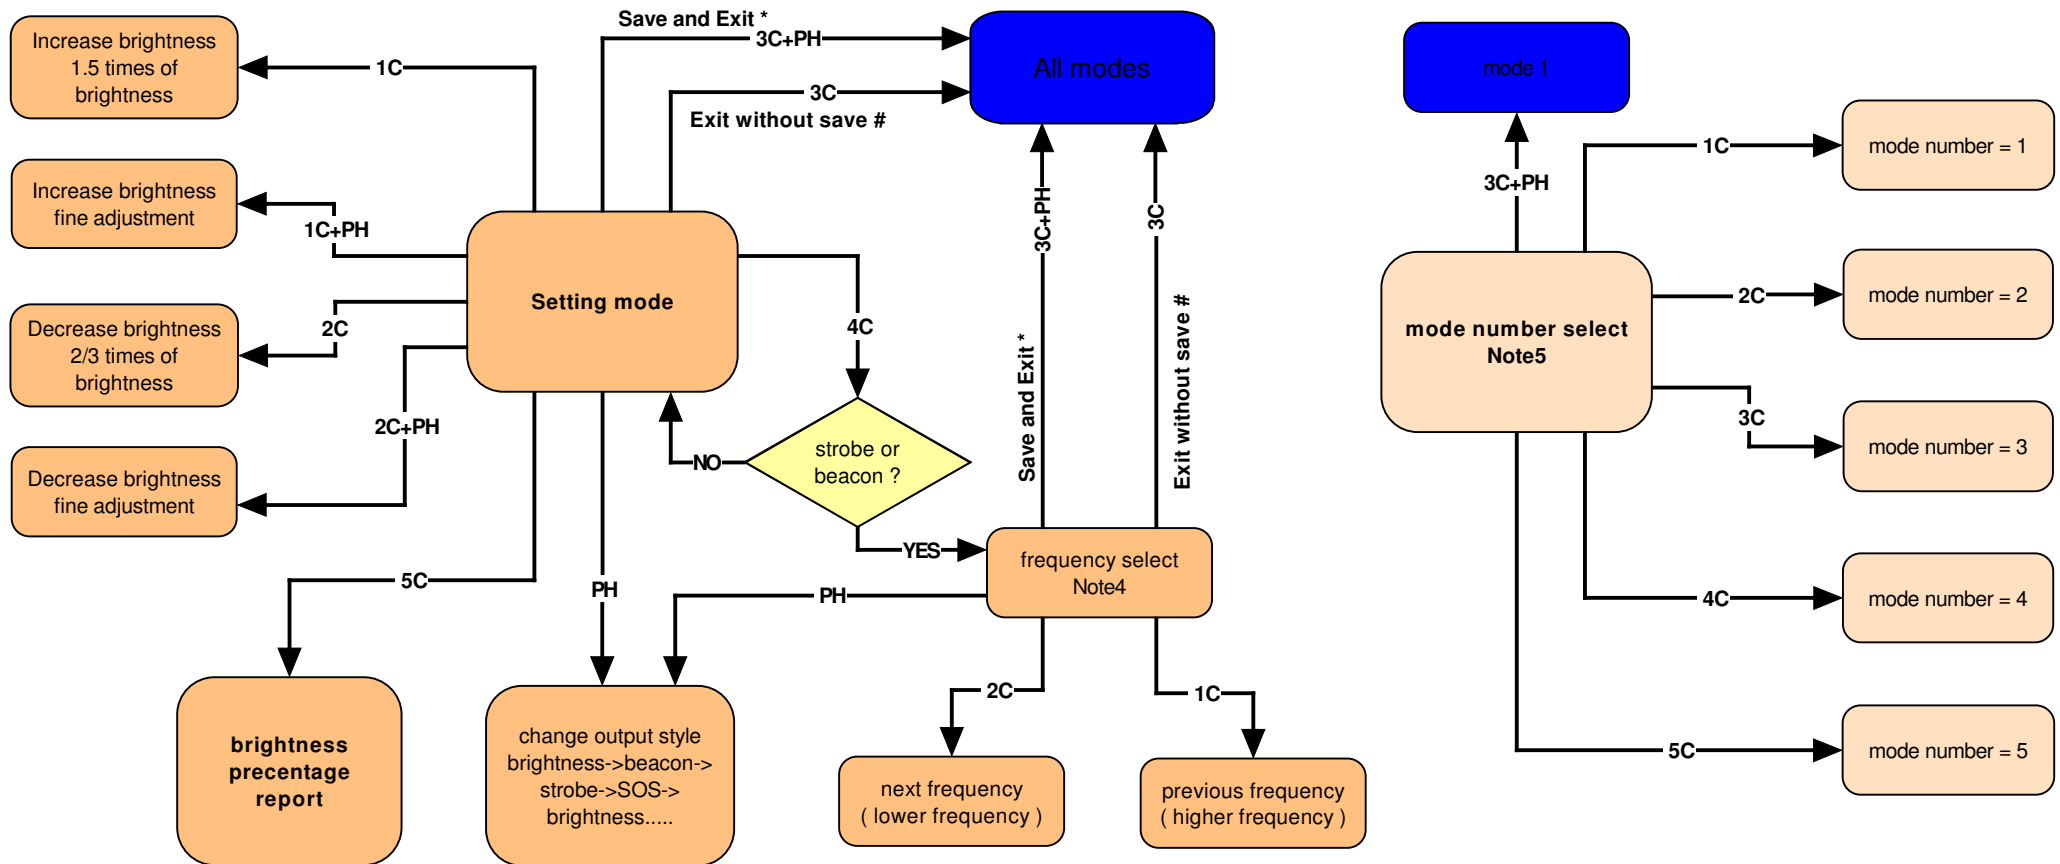

Note4 Only strobe and beacon can select frequency .

Strobe : 1. 20 Hz
2. 15 Hz
3. 12 Hz
4. 10 Hz
5. 8.7 Hz
6. 7.6 Hz
7. 6.8 Hz
8. 6.1 Hz
9. Random

Beacon : 1. 1 flash blank 0.5 second
2. 1 flash blank 1 second
3. 1 flash blank 1.5 seconds
4. 1 flash blank 2 seconds
5. 1 flash blank 2.5 seconds
6. 1 flash blank 3 seconds
7. 1 flash blank 3.5 seconds
8. 1 flash blank 4 seconds

9. 2 flash blank 0.5 second
10. 2 flash blank 1 second
11. 2 flash blank 1.5 seconds
12. 2 flash blank 2 seconds
13. 2 flash blank 2.5 seconds
14. 2 flash blank 3 seconds
15. 2 flash blank 3.5 seconds
16. 2 flash blank 4 seconds

Note5 signal :

mode number = 1 , 1 flash blank 1 second
mode number = 2 , 2 flash blank 1 second
mode number = 3 , 3 flash blank 1 second
mode number = 4 , 4 flash blank 1 second
mode number = 5 , 5 flash blank 1 second

signal :

* double flash represent save and exit

single flash represent exit without save